#### **OPERATING INSTRUCTIONS**



Works with ALERTMASTER® Product Series Door Announcer (AM-DX) Baby Sound Monitor (AM-BX) (XA-MA) maslA oibuA ALERIMASTER® Transmitter

use, use outside the United States or Canada, fire, flood and acts of God. ont service location, alterations, unauthorized repair, taiture to tollow instructions, mis This warranty does not cover defects resulting from accidents, damage while in transit to

ud tye broduct, we will ship it back to you at no cost within the United States. your AÑYAX/PXB back. When shipping for warranty repair, include your name, address, phone to oid daite of purchase and a description of the problem. After repair the problem with the problem and the problem We suggest you save the original package materials in the event that you need to ship

damages, so the above exclusions or imitations may not apply to you. on how long an implied warranty lasts or the exclusion of incidental or consequential your AM-PX/PXB or properly damage caused by your AM-PX/PXB or its failure to work, or any other incleanist or consequential damages. Some states do not allow limitations. OM date of purchase, we will not pay for loss of time, inconvenience, loss of use of Implied warrantier, including those of filness for a particular purpose and merchantabili: y (unwritten warranty that the product is fill for ordinary use), are limited to one year

voice), (800) 772-2889 (TTV). They will help you process your return shipment. You uct of the same or similar design. Repair or replacement will be warranted for either 90 days or the remaining time on the warranty period, whichever is longer. When in need of warranty retriot, whichever is longer. When in need of warranty retriot department at (800) 874-3005 elect to replace your AM-PX/PXB, we may replace it with a new or reconditioned prod If it is returned after 30 days but within one year, Ameriphone will repair or replace it at no charge. In repairing your MVPX/PXB, we may use new or reconditioned parts. If we

If the product is defective and returned within 30 days of purchase, the unit will be replaced at the place of purchase at no charge.

Ameriphone warrants the AM-PX/PXB against any defect in workmanship or material, for a period of one year from the date of purchase.

#### **LIMITED WARRAUTY**

Attach Velcro®

Wall or ceiling

mounting

strip here

**INSTALLATION** 

Attach Velcro® strip to wall or ceiling

ceiling

or Audio alarm

within 6" next to Door Chime/Intercom

Mounting on textured

Attach Velcro® strip

Utilisez un stylo

cule afin qu'ils Boîtier du Alertmaster

gg (g

Émetteur

ou un crayon

pour régler les

boutons à bas-

correspondent

exactement à

ceux du

Alertmaster

AM-6000.

on light plate

# Iransmitter exactly to match Switches Alertmaster base unit to set DIP or pencii Use a pen

- 1. Place the AM-BX with MIC pointing toward and as close to the baby as
- pointing toward and within 6 inches from he audio alarm device or door chime/intercom respectively.

of directly on ceiling.

system to work. settings must be identical for the new switch setting in the console. All Remote Receiver, etc.) to match the your other accessories (doorbell, 4. Change the switch settings on each of

inside of the transmitter. 3. Unscrew housing and locate DIP Switch

> all individual switches to a different 2. Change the switch setting by turning


the AM-7000 console. side of the AM-6000 or the back of 1. Locate the DIP Switches on the under-

channel switch settings on all components. nearby in your neighborhood. Change reasons, it may be triggered by a system repeatedly activates by itself for no obvious If your system encounters interference and

necessary. conditions, there is no adjustment channel setting. Under normal operating been pre-set in the factory to a standard Your system and all the accessories have

"DIP Switch" is used for channel selection. all have to be on the same "channel". A accessolies to activate the base unit, they console unit and all its accessories. For the signals to communicate between the The Alertmaster System uses special radio

#### **CHANNEL SETTING**

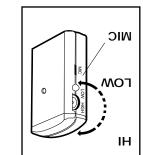

intercom. door or chime or eutly activated by until it is consistlower sensitivity AM-DX Raise or

sensitivity. sonuqs' lower the easily by other If is activated It and It and if XA-MA & XA-MA

follow these steps to adjust their sensitivity: pest results and to suit your application, optimum sensitivity in the factory. But, for All accessories have been pre-set to their

#### SENSITIVITY ADJUSTMENT

#### **PLACEMENT**

- possible, but no more than 5 feet away.
- 2. Place the AM-AX and AM-DX with MIC

For installation on textured ceilings, screw a standard light switch cover, readily available from your local hard-ware store, on ceiling and apply the velcro® strips to the plate instead

#### **BATTERY AND OPERATION TESTS**

Check or change the battery every six months to make sure it is properly charged

**AM-AX** Press the Test button on your audio alarm device. Check that the Alarm function comes on at the Alertmaster console after 12 seconds.

**AM-BX** Make loud noise continuously for 5 seconds or longer. Check that the Sound function comes on the Alertmaster

**AM-DX** Press the intercom or door chime button. Check that the <u>Door</u> function comes on at the Alertmaster console.

### IN CASE OF DIFFICULTY

If any problem should occur during operation of your Alertmaster AM-AX, AM-BX, or AM-DX accessory, review the list below and your Alertmaster AM-6000 or AM-7000 Operating Instructions. Should the difficulty persist, contact AMERIPHONE or your authorized dealer

ioi assisiance.	
SYMPTOM	CAUSE & REMEDY
System does not respond when Alertmaster AM-accessory is tested.	Adjust the sensitivity. Or battery needs to be replaced.
Alertmaster console does not respond when Alertmaster AM-accessory is tested.	The accessory may not be at the right "Channel Setting". See "Channel Setting" section.
System activates erratically	If the System picks up other wireless signals, change channel setting on all components. See "Channel Setting".

#### ALERTMASTER® Transmitter Alarme Audio (AM-AX) Moniteur Sons De Bébé (AM-BX) Aventisseur De Porte (AM-DX)

Battery

Connection


À utiliser avec Alertmaster AM-6000 ou AM-7000



#### MANUEL D' UTILISATION aw66lbHov6,

12082 Western Avenue, Garden Grove, CA 92841 VOIX (800) 874-3005 TTY (800) 772-2889 TÉLÉCOPIEUR (714) 897-4703 ameriphonecs@plantronics.com www.ameriphone.com

#### **INSTALLATION ORIENTATION**

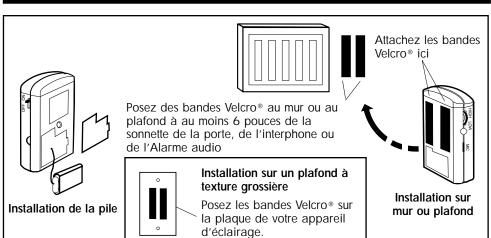

#### 1. Placez le microphone du AM-BX tourné vers le bébé et le plus près possible de celui-ci; ne pas le placer à plus de 5 pieds de distance.

2. Placez le microphone du AM-AX et du AM-DX tourné vers l'Alarme audio, la sonnette de la porte ou l'interphone à une distance de moins de 6 pouces.

Pour installer votre appareil sur un plafond à texture grossière, vissez au plafond a plaque d'une lampe d'é clairage standard que vous pouvez acheter dans une quincaillerie et installez sur celle-ci les bandes Velcro®, au lieu de les installer directement sur le plafond.

#### **EN CAS DE DIFFICULTÉS**

Si vos accessoires Alertmaster AM-AX, AM-BX ou AM-DX venaient à mal fonctionner, consultez la liste suivante ainsi que le Manuel d'utilisation de votre Alertmaster AM-6000 ou AM-7000. Au cas où le problème persisterait, communiquez avec Ameriphone ou avec votre détaillant autorisé pour obtenir de l'aide.

Problèmes	Causes et solutions
Le système ne répond pas lorsque vous faites l'essai de votre accessoire Alertmaster AM.	Réglez la sensibilité. Les piles doivent peut-être être remplacées.
La console Alertmaster ne répond pas lorsque vous faites l'essai de votre accessoire Alertmaster AM.	L'accessoire n'est peut-être pas réglé à la bonne fréquence. Voir la section sur le réglage de la fréquence.
Le système s'active de façon irrégulière.	Le système capte d'autres signaux d'appareils sans fil. Changez la fréquence de toutes les composantes. Voir la section sur le réglage de la fréquence.


#### RÉGLAGE DE LA SENSIBILITÉ

Tous les accessoires ont été réglés à leur maximum de sensibilité à l'usine. Cependant, pour obtenir les meilleurs résultats possibles et pour les adapter à vos besoins, suivez les directives suivantes pour régler leur sensibilité.

#### AM-AX et AM-BX Commencez à

«HI» et si d'autres sons activent l'appareil facilement baissez la sensibilité.

AM-DX Élevez ou baissez le niveau de sensibilité jusqu'à ce que l'appareil soit activé régulièrement par la sonnette de la porte ou l'interphone.

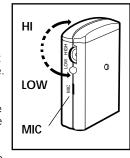

#### RÉGLAGE DE LA FRÉQUENCE

Le système Alertmaster utilise certains signaux radio spéciaux pour la communication entre la console et les accessoires. Pour que les accessoires puissent activer l'appareil, ils doivent tous être réglés sur la même fréquence. Un «bouton à bascule» est utilisé pour choisir la fréquence.

Votre système et tous ses accessoires ont déjà été réglés à l'usine selon une fréquence standard. Dans des conditions normales d'utilisation, il n'est pas nécessaire de procéder à des rajustements.

Si des parasites se produisent dans la réception de votre appareil et que celui-ci s'active de lui-même et sans raison évidente, il se pourrait qu'il soit activé par un système dans votre voisinage. Changez la fréquence de toutes les composantes.

- 1. Localisez les boutons à bascule sous la console de votre AM-6000 ou en arriere du AM-7000.
- 2. Changez les boutons en les tournant tous à une position différente.
- 3. Dévissez le couvercle et localisez les boutons à bascule à l'intérieur de l'émetteur.
- 4. Changez la fréquence de chaque accessoire (sonnette, émetteur à distance, etc.) pour qu'elle corresponde à la nouvelle fréquence de la console. Pour que votre système fonctionne correctement, il faut que toutes les composantes soient réglées sur la même fréquence.

#### ESSAI DES PILES DE **FONCTIONNEMENT**

AM-AX Appuyez sur le bouton d'essai (Test button) sur votre appareil Alarme audio. Vérifiez si la fonction Alarm est activée sur la console du Alertmaster après 12 secondes.

**AM-BX** Vous entendrez un bruit continu pendant 5 secondes ou plus. Vérifiez si la fonction Sound est activée sur la console du Alertmaster.

**AM-DX** Appuyez sur le bouton de l'interphone ou de la sonnette de la porte. Vérifiez si la fonction Door (porte) est activée sur la console du Alertmaster.

## **GARANTIE LIMITE**

Ameriphone garantit ecouteur personnel contre tout défaut de matériaux ou de fabrica-Si l'appareil s'avère défectueux et est retourné dans les 30 jours après la date d'achat, le défaillant de l'appareil le remplace sans frais.

Si l'appareil est renvoyé après 30 jours mais dans le délai d'un an, Ameriphone le répare ou le remplace sans frais. Des pièces neuves ou remises à neuf peuvent être utilisées. Si ecouleur personnel est remplace, il l'est par un article neuf ou remis à neuf identique ou similaire. La réparation ou le remplacement est garanti pendant 90 jours ou la période non écoulée de la garantie en vigueur, selon la plus longue des deux périodes. Pour les réparations sous garantie, appelez notre service après-vente au 1-800-874-3005 (tel.) ou 1-800-772-2889 (AIS), vous recevrez des instructions pour expédier l'article. Nous n'assumons pas les frais d'envoi.

les garanties implicites, y compris les garanties de qualité loyale et marchande à des fins particulières (garantie non écrite de fonctionnement de l'appareil en cas d'utilisation normale) ont une limite d'un an à partir de la date d'achat. Nous ne serons tenus responsables d'aucune perte de leimps, géne ou impossibilité d'utiliser ecouleur personnel, ni d'aucun dégât matériel occasionné par l'appareil ou son impossibilité à fonctionner, ni d'aucun dômmage direct ou indirect. Certaines lois provinciales ne permetient pas les restrictions de durée des garanties implicites ni l'exclusion de certains dommages directs ou indirects; les exclusions ou restrictions ci-dessus peuvent donc ne pas vous

Nous vous conseillons de garder l'emballage d'origine au cas où vous devez renvoyer ecoufeur personnel. N'oubliez pas d'inclure vos nom, adresse et numéro de téléphone, ainsi que la preuve de la date d'achat et une description du problème. Après réparation de l'appareil, nous le réexpédions gratuitement aux Etats-Unis et au Canada.

La garantie ne couvre pas les défauls dus à un accident, ni les dommages subis lors du trañsport vers notre service après-vente, les modifications, les réparations non autorisées, l'inobservation du mode d'emploi, l'utilisation abusive, les incendies, les inondations, les catastrophes naturelles ou l'utilisation hors des États-Unis ou du Canada.